

sisco
Pipeline Camera
User Manual

Version 1.0

Please read this manual carefully before use!

Precautions

Do not drop or press hard.

- If the customer disassembles or damages the device by himself, the warranty is void.
- Please copy your data before connecting the TF card. The manufacturer is not responsible for any consequences of data loss.
- Do not suddenly cut off the power during recording and playback, which may damage the product and video files.
- The configuration of the product you purchased may be different, and the accessories may be different. Please follow the actual accessories.
- If the cable is broken or the camera is broken, it can only be purchased separately and cannot be guaranteed.
- The display is not rainproof.

Product Application Range

- Pipeline dredging machine
- Pipeline inspection camera pipeline tool
- Underground pipeline, air conditioning pipeline, oil and gas pipeline
- Rescue work in small spaces
- For underground exploration
- Underwater riverbed research
- Downhole television


Instructions

Download App


Method 1: Mobile: For iOS users, please search for "Anesokit" APP in the App store and download and install it. The system supports iOS 9.0+.

For Android users, please search for "Anesokit" APP in the Google Play store and download and install it. The system supports (Android6.0+).


Method 2: Scan the QR code and download the APP. The system supports (Android6.0+, iOS9.0+).

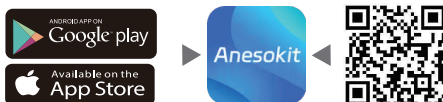

APP Introduction

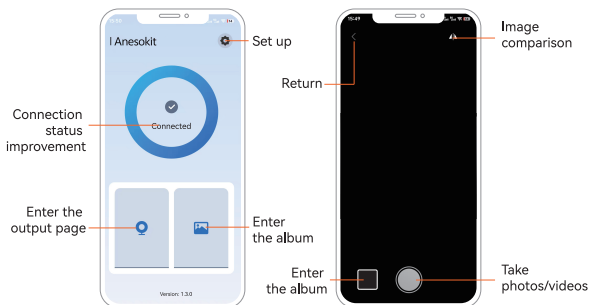

Function Introduction

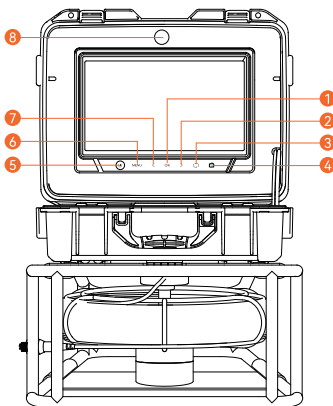

1 Confirm key

In photo/video mode, short press to freeze the page; in menu/setting mode, short press to confirm; in playback mode, short press to play the video

2 Down Select Key

Move down; fast forward in video playback mode; zoom in on the page in photo/video mode

3 Cycle Key

Short press to switch between photo/video/replay mode; short press to return to the previous page on other pages

4 Camera button

Short press to take photo/start recording/and recording

5 Power button

Long press for 3 seconds to turn on/off

7 Up Select Key

Move up/fast rewind in video playback mode

6 Menu key/setting key

In photo/video mode, short press once to enter the menu page, short press twice to enter the settings page; in playback mode, short press once to enter the delete/protect page.


8 Power Failure Reset Switch

Press Quick Reset when the machine loses power


Accessories List



Lens protective case

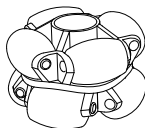

Guide wheel

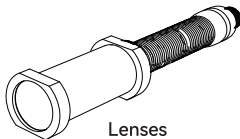


Lenses



Data cable

Device Charging

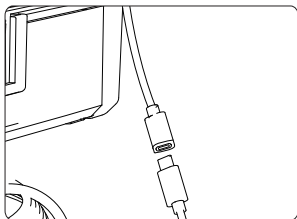

Connect the Type-C adapter

Connect the device to a Type-C adapter for charging (5V/1A), fast charging is not supported.

FAQ Help

1. Blue screen, no light

- Check if the camera connector is connected or plugged in properly
- Check if the battery is charged enough, try again after fully charging

2. Cannot turn on/no power

- Battery exhausted

3. Light flashes

- Low battery
- The display has a battery level indicator, which can be checked.
- You can turn off or lower the LED brightness for longer use.

4. Cannot charge

- Is the charger indicator on?
- Is the USB plug plugged in properly or the cable is broken.

5. The camera color is wrong

- Is the battery low?

Product Parameters

Screen size: 10 inches
Charging: 5V-1A
Field of view: 145°
Battery life: 8 hours
Display resolution: 1280*720
Charging port: TYPE-C
Camera light source: 8 LEDs
Wire diameter: 5mm
Photo/video: color AVI JPEG
Waterproof rating: IP67
TF card: memory supports up to 128GTF cards
Box size: 430*350*215mm
Camera size: 23*40mm
Camera material: stainless steel