



Industrial Endoscope

Manual

Version 1.1

Please read this manual carefully before use!

Safety and Maintenance

 
 
 **Warning:** This product is a Multifunctional Articulating Borescope camera and is not intended for medical use or human examination.

- Striking or dropping the camera may cause damage to the device. Pulling the cable could also damage the device.
- When used in an environment with sharp edges, please use it carefully to prevent the waterproof protective layer of the probe from being scratched.
- The camera probe is not made of heat-resistant materials. When checking an automobile engine, please ensure that the temperature in the engine drops to normal temperature.
- When not in use, please ensure that the lens and the main unit are clean and dry, and avoid contact with oils or any corrosive or dangerous substances.
- This product is not suitable for people with limited physical, sensory or mental abilities.
- Do not allow children to touch and operate this device.

Battery Instructions

- Please use a 5V household charger that meets the safety regulations to charge the equipment. Fast charging is not supported.
- This device supports charging while using.
- If the device is not used for a long time, please ensure that it is charged at least once every 3 months to prevent irreparable damage caused by excessive discharge of the battery.

Functions

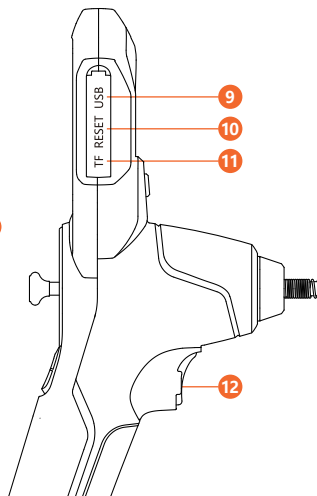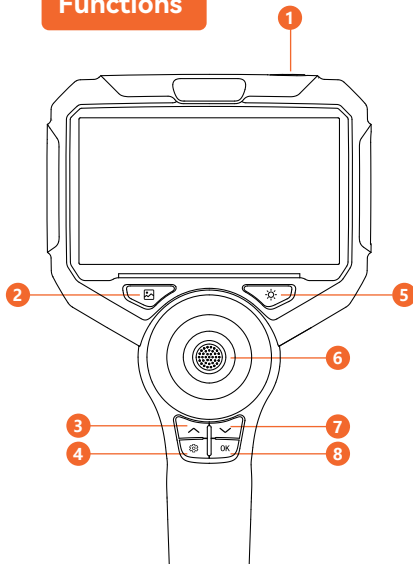

1 Power button

Press and hold for 3 seconds to turn on and off the power of the machine

3 Up key

(1)Up key (2)Screen zoom
(3)Video playback, fast forward key

5 Dimming button

Camera LED light with 3 levels of brightness adjustment

7 Down key

(1)Scroll down (2)Screen rotation
(3)Video playback back key

2 Photo album

Enter/exit the picture preview interface

4 Set button

Enter the menu setting interface

6 Rocker control

The camera can be adjusted to any angle of 720°

8 OK key

The image interface is static, and other interfaces are confirmation functions

 
- 9 Charging port**
Support Type-C charging

- 10 Reset button**
When the product freezes, press to restart the device


- 11 TF card slot**
Support expansion 0~64G TF (Micro SD) card
**Please insert the TF card in the off state*

- 12 Camera button**
(1) Short press to take a photo
(2) Long press to record


Instructions

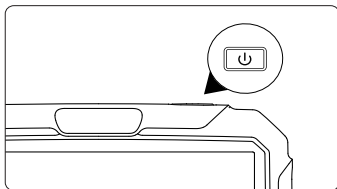

Press and hold "⏻"
to power on / off

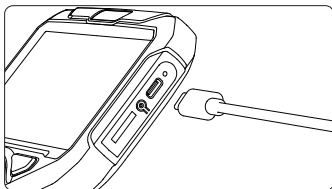 

 
Use the type-C charging cable to
charge the device

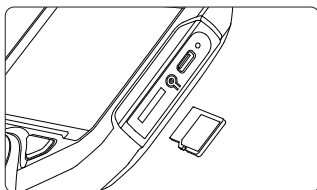

Insert Micro SD card


▲ Insert Micro SD ca

 - Please insert the Micro SD card while the device is powered off.
- Please pay attention to the insertion direction and ensure front and back sides of Micro SD card are oriented correctly (see image).
- Do not use excessive force when inserting or pulling out the Micro SD card to prevent damage to the card slot.

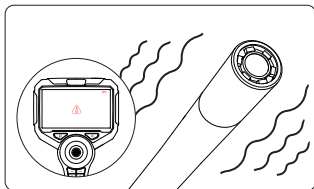

Built-in camera temperature sensor

 75°C (167°F) is the warning line and if the temperature exceeds 80°C (176°F) the camera will stop working automatically. If this happens, wait for the camera temperature to fall back to 70°C (158°F).

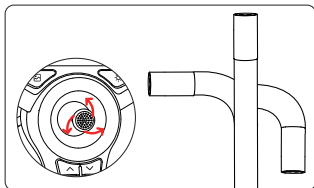

The joystick controls the camera in any direction of 720°

 
Language Settings

The default language is English, and the system also supports Simplified Chinese, Japanese, English, Korean, French, German, Italian, Spanish, Russian, Polish

- ① Press "⚙️" button to enter the settings page
- ② Select the language setting
- ③ Press the up and down button to select the desired language
- ④ Press "OK" to save

Copy Picture and Video Files

Users may use a Micro SD card to copy directly, or use a Type-C cable to copy to computer.

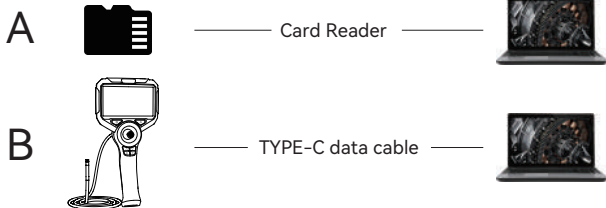

When operating the copy function, if the machine is not connected to the computer, please restart the machine or plug and unplug the TYPE-C data line. Do not plug and unplug the TYPE-C data cable during the data transmission process, which will cause the data transmission to fail.

Charging Guide

1. Connect the device to the Type-C USB adapter for charging (5V=1A/5V=2A). The product does not support fast charging.
- 2.(1) During the charging process, the power symbol indicates that the charging is in progress;
(2) When the device is fully charged, the power display shows the full state.

FAQ

1.Lag time is normal during photo output.

Please check whether the product has sufficient power, or restart the device, or reassemble the flexible conduit if lag continues.

2.Product crashes, does not output a picture or the screen turns black.

Please press the device reset button to restart your device.

3.Imaging screen is not clear.

The best imaging focal length of the product is: 2cm–10cm. Please calibrate the distance to the object, or clean the front of the camera with a clean alcohol cloth.

4.Product charging.

Please use 5V=1A/5V=2A charger to charge the device. The product does not support fast charging.

5.The camera is hot.

It is normal for the camera to heat up, especially when the camera LED light is on at the highest brightness. But it does not affect normal use or service life.

6.Micro SD card can not be recognized.

Please confirm whether the Micro SD format is FAT32. If not, please format it and plug and unplug the Micro SD card again.

EU Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling recommendations.

Specifications

Product name: Industrial endoscope
Screen size: 5.0 inches
Sensor: CMOS
Lumen: 24lm
Focal length range: 2-10cm
Waterproof grade: IP67
Charging: 5V/1A (5V/2A)
Field of view: 70 degrees
Camera temperature: 33.8°F-176°F
Working temperature: 33.8°F-113°F
Charging time: 2.5 hours
Battery life: 3 hours
Charging interface: TYPE-C
Resolution: 1920*1080