



Digital Fridge/Freezer Thermometer User Manual

Model: E-16

Specifications:

- Room Temperature range: -14°F~122°F/-10°C~50°C
- Freezer/fridge range: -58°F~158°F/-50°C~70°C
- Material: ABS
- Accuracy: $\pm 1^{\circ}\text{C}$ (1.2°F~2.4°F)
- Power supply: 1.5V(AAA size)x1

Operating Instruction:

- Install the battery by pulling down the battery cover.
The thermometer will display for 3 seconds before showing the fridge sensor.
- Place the sensor inside the fridge/freezer and insert it into the holder.
- Use the provided adhesive sticker or magnets to attach the thermometer outside the fridge/freezer.



Key instructions:

【°C/°F 】 : Switch temperature units.

【Room/Fridge】 : Toggle between displaying room or refrigerator/freezer temperature.

【MIN/MAX】 : Display maximum/minimum measured values; hold for at least 2 seconds to reset.

【】 : Set alarm.

Setting the alarm:

- Long press the <  > button to enter the alarm temperature setting interface. The value will blink, indicating the setting of the **HI** temperature. Press the <°C/°F  > button to adjust the set temperature upwards.
- After setting the **HI** temperature, press the <  > button to switch to adjusting the **LO** temperature. Similarly, set the temperature by pressing the <°C/°F  > button to adjust the temperature upwards.