
SISCO PRODUCT MANUAL

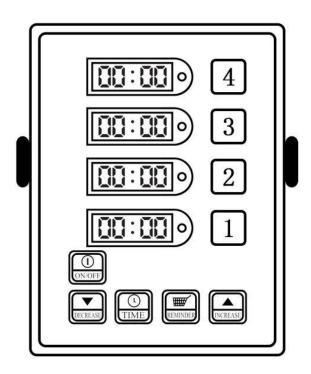

Product Introduction

With 4 sets of independent timers each channel can be individually set to display.

Features:

- The time can be set from 00:00 99:59 minutes, or 00:00 99:59 hours.
- Volume is adjustable. It can be set manually using the \triangle /increase or ∇ /decrease buttons.
- Easy to clean ABS and Stainless Steel construction.
- Mounting brackets and hardware included.



Operation Instruction

1. Press ON/OFF button to turn the unit on

The channels will all display 88:88 for 3 seconds while the unit is testing itself to ensure it is operating correctly.

Press ON/OFF button for 2 seconds to turn the unit off.

2. To Set Timers:

- a. Press the \odot button, then the corresponding channel number (1-4) you are changing. The second set of "00" after the colon will begin to flash. Use the \triangle/∇ buttons to adjust the seconds.
- b. Next, press the corresponding channel number (1-4) and the first set of "00" will begin to flash allowing you to change the minutes. Use the \triangle/∇ buttons to adjust the minutes.
- c. Press the © button to return to the main display.
- * Note: When entering the time setting it will not affect any timer currently in use.
- 3. Change channel from Minutes: Seconds (MM:SS) to Hours: Minutes (HH:MM)
 - a. While the timer is off, press and hold the © button for approximately 2 seconds.
 - b. To change the display press the corresponding channel number (1-4); H-N indicates Hours: Minutes and N-S indicates Minutes: Seconds

4. To Set Reminder Alarm(s):

- a. Press the button.
- b. AL-1 appears, press the corresponding channel number (1-4) you are setting the alarm for. Then press \triangle/∇ to adjust the time.
- c. Press the button to go to AL-2 and use \triangle/∇ buttons to adjust the time.
- d. Press the \blacksquare button to go to AL-3and use \triangle/∇ buttons to adjust the time.
- e. Once set AL-1, AL-2 and AL-3 will flash and the alarm will beep until the corresponding channel number is pressed. The timer will continue to count down while the reminder alarms are active.
- f. When the countdown ends and the (End) state is displayed, press \triangle/∇ to adjust the sound.
- * Note: Leave time display at 00:00 if you do not want to use multiple alarms.



5. START or STOP a timer


Press the corresponding channel number (1-4) for the timer you would like to start. The colon will flash indicating the timer has been started. Press the corresponding channel number (1-4) for 2 seconds to reset the individual timer.

- 6. At the end of the timer press the corresponding channel number (1-4) to end the alarm. It will then reset to the programmed value.
- 7. Adjustment of volume:

Use the \triangle and ∇ buttons to adjust the volume from the main timer screen. The selected volume will automatically be saved.

Note: There is no alarm sound on the lowest volume setting.

Diagram Of Control Panel

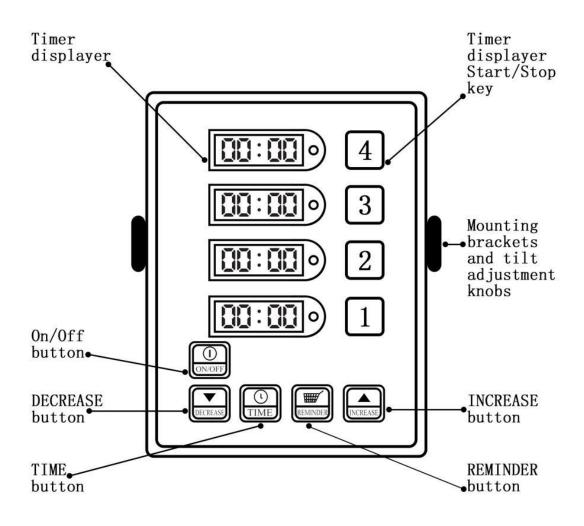



Care and Maintenance:

- The unit is made of ABS and stainless steel and is not waterproof.

 When cleaning, use a wet cloth with oil degreaser and wipe.

 Do not submerge in water. Do not use in dishwasher.
- Do not use hard objects to press buttons. Using items other than a finger may result in scratching the unit and screens.
- Please ensure the mounting brackets are securely attached to the wall before affixing the timer to the brackets.
- Read the instruction manual carefully before using this device.
- DO NOT open or disassemble the timer.

 Doing so may result in electrical shock, and will void the warranty.

Technical Specifications

Unit Size	170*130*36mm
Voltage	AC110V/220V
Power	1.5W
Unit Weight	750g
Timer Group	4
Reminder alarms	1 Stages

