

ENGLISH

Single Row Stopwatch Manual

Thank you for giving LEAP the opportunity to time your activity. Please take a few minutes to study the operating guide as follows.

 
PART I Features

- Time of day in hours, minutes and seconds.
- Calendar with day, month and date.
- Daily alarm & chime and repeating alarm .
- 12/24 hour time options.
- Temperature display with Celsius system.
 (only for the metal stopwatch model TF807)

PART II Push Buttons Instructions

Please confirm which model you have on the below.

- [A] START/STOP
- [B] RESET
- [C] MODE
- 【D】 EL (only the stopwatch with 4 button has such function)



PART III Operating Instructions

3.1 Switching between modes

In clock mode, press [C] switch between modes as the following sequence:



3.2 Alarm setting up steps

In normal timer mode, press [C] two times to enter the alarm settings, "hour"starts to flash. Press [C] key each time, switch to "hour--> minute". When the digits start to flash, press [A] key each time to add "1". Keep pressing it to add rapidly. After setting, press [C] to exit the alarm setting and back to clock mode.

3.3 Time set up steps

In normal timer mode, press 【C】 three times to enter the time setting. "Second" start to flash, then press 【B】 key each time, switch beween modes as the following sequence: "second"— "minute"— "hour"—"day"—"month"—"week".

When the digits starts to flash, each press 【A】 key to add "1". Keeping press will increase rapidly. In setting "hour", system switch to the 12/24 hour automatically. After setting, press 【C】 to return normal timer mode.

3.4 Operation Details

- **3.41** In normal time mode: press and hold the **[**A**]** button can review "date and week".
- **3.42 In normal time mode:** press and hold the **[B]** button to display the "alarm time".
- 3.43 In normal time mode: press and hold the 【B】 and 【A】 buttons can turn on or turn off the "alarm function". " ℰ "for alarm on ," "for alarm off.
- 3.44 In normal time mode: press and hold [B] and [C] buttons can turn on or turn off "hourly chime function".
- 3.45 When the alarm is active, press the 【A】 button to enter repeat alarm mode, it will repeat alarm after five minutes if you need, press the 【B】 button to relieve.

3.5 EL backlight function

Press 【D】 button ,the backlight will be shown on the screen, it will be shut off three seconds later automatically.

3.6 Temperature display feature

In the normal time mode ,the screen will be displayed the temperature on right side. Its' measurement will be affected by body temperature, sunlight. The correct value of temperature will be available 30 minutes later(The value of temperature is for reference only).

PART IV Maintenance

- **4.1** The battery can be replaced at once when it becomes depleted.
 - Please ask your local retailer to replace the battery for you using a LR44 (alkaline) or CR2032 (lithium) or equivalent.
- 4.2 The lens be replaced immediately if it becomes damaged, as contamination from dust, moisture, and other foreign substances will damage the module.
- 4.3 If the timepiece is not marked "water-resistant", avoid immersing or exposing it to water, steam, or other forms of moisture.

The Executive Standard NO.: GB/T22778-2021

Warranty period: one year from the date of purchase. (battery and physical damage is exclude .)

