


Configuration Instruction

Before configuration, please power on the device and connect to the computer through the serial port.

1: Open Configuration Tool, click **Read**

Convention 8024G-20231219

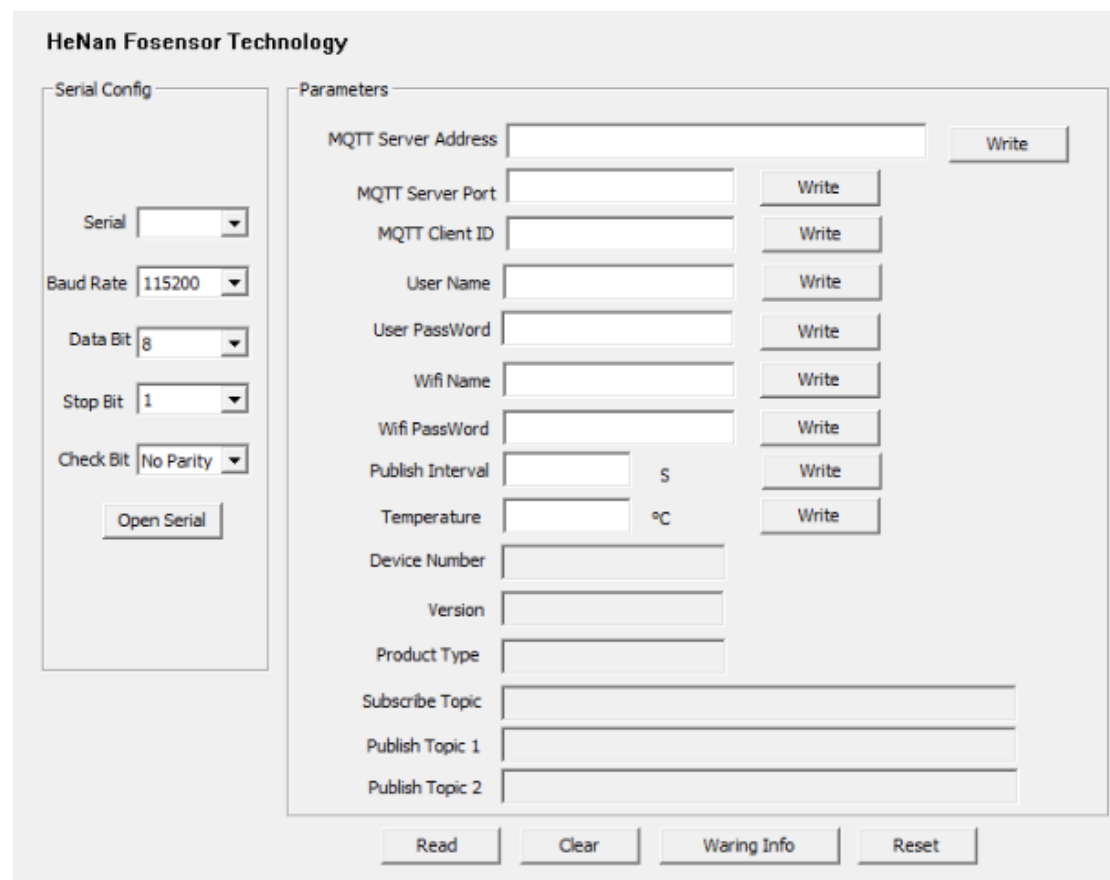

2: Configuration parameters following below steps as below picture.

(1) MQTT server Address: fosensorcloud.com and click write.

(2) MQTT server port: 1883 and click write.

(3) MQTT Client ID: XXXXXX and click write.


(4) User name: admin and click write.

(5) Password: 123456 and click write.

(6) Wifi name: XXXXXX and click write.

(7) Wifi key: XXXXXX and click write.

(8) Click Reset

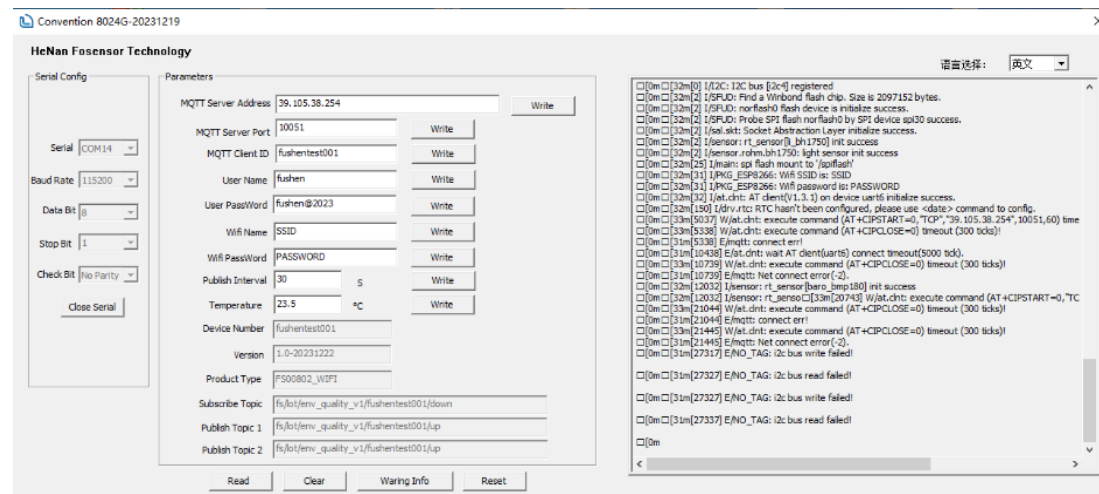

Note:

The mqtt server login information consists of the server address, port number, user name, and password, which need to be set by the user according to the requirements.

1: 4G products only need to configure the server login information for mqtt, and other Settings are not required.

2: WIFI products only need to configure MQTT server login information, but also need to set WIFI account and password.