


Home Carbon Monoxide Detector User Manual



More content

Scan the QR code to obtain the electronic manual in the corresponding language for more content.

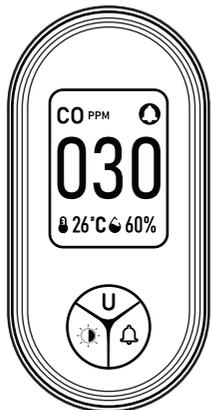

Specification



Model: SISCO-SMOKE-S02
 Carbon Monoxide: 0-999PPM (±10%)
 CO Sound Alarm Range: (Initial Default) 51 PPM
 Temperature: -10°C-50°C (±1.5°C)/14°F-122°F (±2.7°F)
 Humidity: 0%-95% RH (±5%)
 Input: 100-240V 50/60Hz Replaceable,
 Screen: 2.0"320*240 IPS
 Shell: Flame Retardant ABS Plastic
 Work Temp: -10°C-50°C/14°F-122°F
 Alarm: Yes
 Product Size: 105mmx55mmx52mm (With Plug)
 Packing List: PTH-24DX1; ManualX1; PlugX1

Warning!


The carbon monoxide measurement function provided, as well as the alarm of exceeding the standard, are for reference only and cannot be relied upon as the sole basis. In the process of daily use, you should pay attention to safety and maintain good ventilation at all times to avoid danger!

Product Introduction


Product Front

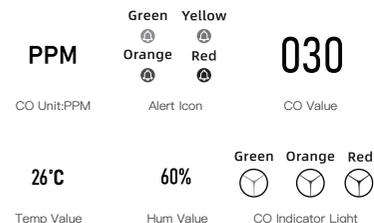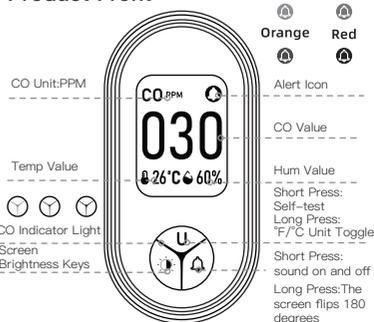

Product back

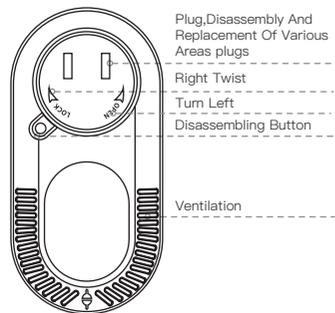

Light indication alert

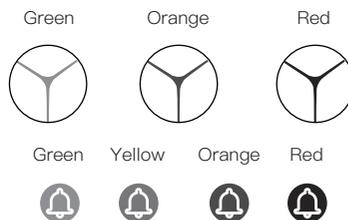

Green Breathing

When the carbon monoxide concentration is 0-50ppm, the emerald green breathing light flashes, and the screen initially defaults to a green icon, indicating that the carbon monoxide concentration is at a low level, and the buzzer has no alarm sound.

Orange Breathing

When the carbon monoxide concentration is 51-100ppm, the orange breathing light flashes, and a yellow warning icon appears on the screen, indicating alert, and the buzzer has an audible alarm.

Orange Flash

When the carbon monoxide concentration is 101-150ppm, the flash orange flash light, an orange warning icon appears on the screen, indicating danger, and the buzzer has an audible alarm.


Red Pop -Up, Unable To Close

When the carbon monoxide concentration is more than 150ppm, the red flash light flashes, and a red warning icon appears on the screen, indicating danger, and the buzzer has an audible alarm.

Notice:

1. The RGB color indicator is linked with the screen brightness adjustment, and when the screen brightness is 0%, the RGB color indicator is turned off.
2. Level 2 and 4 are not brightly adjusted, cannot be muted, cannot turn off the screen, or the screen goes directly from 0% to 100%.
3. When the screen is off, the RGB color light flashes at low frequency.

Operation

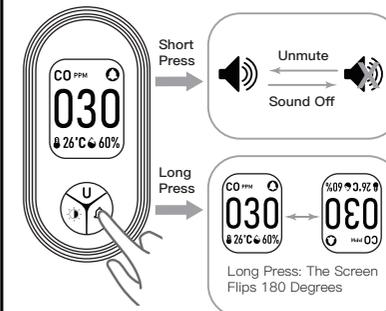

WARRANTY INSTRUCTIONS

Dear Sir or Madam, thank you for purchasing the product. We hope you'll enjoy using it. The warranty for the products in the warranty card is hereby granted as follows. As a condition of using the warranty, you must comply with the following terms and procedures:

1. Products are covered by a 24-month warranty, effective from the date of purchase of the covered product by a retail customer.
2. In order to exercise warranty rights, the purchaser must present: a) Warranty card, b) Proof of purchase (VAT invoice, financial receipt or other document confirming the actual date of purchase), unless the purchase date of the product comes from the warranty card.
3. If product quality problems occur within 24 months from the date of receipt, please prepare the product and packaging and go to the place or store where you purchased it to apply for after-sales maintenance. If the product is damaged due to personal reasons, a certain maintenance fee will be charged.


4. We recommend that you properly protect the goods when delivering them to the guarantor - for this purpose, we recommend that you use the original packaging with padding to ensure safe transportation. If you choose to use replacement packaging, we recommend that you ensure that the product is adequately protected from damage during shipping. We recommend that you place an appropriate sticker on your packaging indicating the product's susceptibility to impact, such as "Warning Glass".
5. Reported defects covered by the warranty will be considered immediately and no later than 14 days from the date of delivery of the goods to the Guarantor.
6. After checking and determining the legality of the warranty claim, the Guarantor's services will repair the product within a reasonable time, not exceeding 30 days from the date of delivery of the goods to the Guarantor. However, if hard-to-find spare parts are required, this deadline may extend the time it takes to deliver the part from the manufacturer's factory.
7. The warranty does not include the performance of maintenance and similar operations specified in the user manual, and users are obliged to do it themselves.
8. If defects occur due to natural wear and tear during use, the warranty does not cover it.
9. The warranty does not cover:
 - a) Mechanical damage caused by the user's fault and product defects caused by such damage.
 - b) Damage caused by improper use of the product.
10. The rights under the guarantee will expire

in the following circumstances:

- a) Remove the warranty seal from the product.
- b) Remove the serial number from the product.
- c) Take action to eliminate physical defects in the product outside of authorized service.
- d) Use non-original parts and consumables.

RECYCLING INFORMATION

All products marked with the symbol for separate collection of waste electrical and electronic equipment (WEEE Directive 2012/19 / EU) must be disposed of separately from unsorted municipal waste. To protect your health and the environment, this equipment must be disposed of at designated collection points for electrical and electronic equipment designated by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences for the environment and human health. To find out where these collection points are and how they work, contact the installer or your local authority.

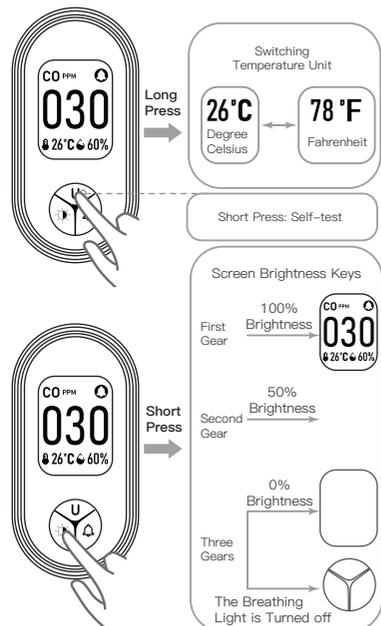

When the screen brightness is 0%, turn off the breathing light, and when the alarm reaches level 4, the red flash light cannot be turned off, and the screen cannot be turned off.