


Model: SC10 series No.: SMS0079

sisco

Portable Stowable Endoscope with 2.4" Screen

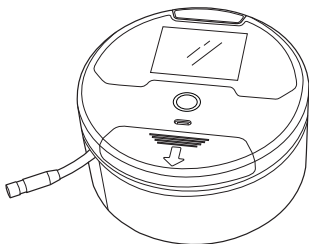

User's manual V2.0

English

Product Details

1. HD 2.4 inch Screen

2. Power On/Off Button & Indicator Light

A. Long press to turn on/off

B. Power on and use status, the indicator light is blue

3. Type-C charging port

A. Charge before use

B. Charging state, the indicator light is red, when fully charged, the indicator light is off

4. Accessory storage slot

A. Open the accessory slot in the direction of the arrow, remove the accessory, and then close it.

5. HD Camera

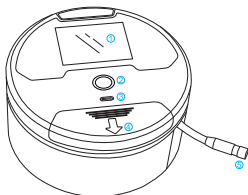


Figure 1

Step 1: Long press to turn on



Figure 2

Step 2: Pull out the cable

Hold the lower shell and pull out the cable by following this arrow direction ,

Note: Do not pinch the camera part when pull out the cable , If the cable is stuck, retract the cable and pull it out again

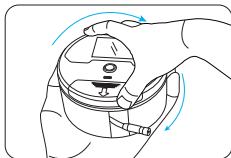


Figure 3

Step 3: Retract the cable

Hold the lower shell & rotate the upper shell clockwise to retract the cable

Installation of accessories

This product has many models, different accessories, the specific to the actual standard

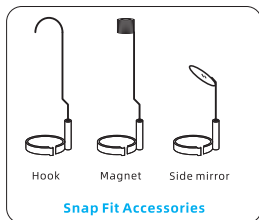


Figure 4

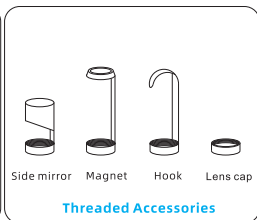


Figure 5

Installation for Snap Fit Accessories

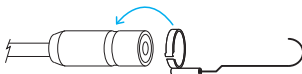


Figure 6

Step 1: Align the accessory with the slot position of the Camera




Figure 7




Figure 8

Step 2: Close the clip of the accessory (see Figure 7- 8)

Installation for Threaded Accessories



Figure 9



Figure 10

Step 1: Align the thread position of the Camera

Step 2: Gently tighten the accessories

Other accessories

Lens protection---Cable Clips Buckle



Figure 11

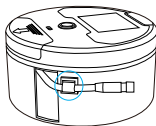


Figure 12

How to use the clips buckle --see Figure 12

Note: This accessory is for reference only and cannot be considered as an after-sales issue.

Troubleshooting

1. Image blurring

- If the lens into the water and stained with dirt, wipe clean with a clean cloth, and then put it in a dry place to dry.
 - Wipe the display with a clean cloth / if the display has been attached to the protective film, you can tear off the protective film.
 - Lens effective focal length range 3-8cm
 - Insufficient power, timely charging
2. In case of other problems, please contact the supplier.

Parameters

Lens diameter:	☐ 3.9mm	☐ 5.5mm	☐ 8.0mm	☐ other:
Lens pixel:	☐ 1.0MP	☐ 2.0MP	☐ 5.0MP	☐ other:
Viewing angle:	70 degrees			
Lens light source:	☐ 6 Leds	☐ 8 Leds		
Waterproof:	IP67(only for Lens)			
Display screen:	2.4 inch color screen			

At the end of service life, please dispose of the product according to local environmental protection policies

This product is only suitable for industrial use and is not allowed to be used as a medical product